



VISTA-20P

Control Panel

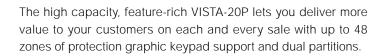

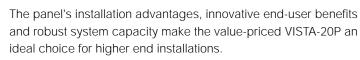

Features

- Eight on-board hardwire zones standard (15 when Zone Doubling feature is used)
- Expandable to 48 total zones when used with hardwired and/or wireless expansion modules
- Supports 6270 graphic touchscreen keypads
- Wireless keys can be programmed without using zones
- 16 output devices
 - Relays (Model 4204 Relay Modules, or 4229 Expansion Module)
- Two low current on-board trigger outputs
- 100 Event Log viewable at system keypads with time/date stamp
- 48 system user codes assignable to either partition
- Two independent partitions plus a common partition
 - Global Arming from any system keypad
 - Goto function to view or operate one partition from the other
 - Separate partition account numbers

- Four installer configurable zone types allows the installer to create custom zone types by assigning all zone attributes
- Multiple actions on output devices depending on system "state"
 - Turns lights off when system arms
- Turns the same light on when system disarms
- Flashes same lights when system is in alarm
- Built-in phone line cut monitor with programmable delay and annunciation options
 - Display on system keypads
 - Trigger local sounders
- Trigger system bell
- Supports four-wire, and up to 16 two-wire smokes
- Works with Sentrol CleanMe[™] maintenance signal

Valuable End User Features

- Now viewable on system keypads:
- Exit countdown
- Time and date display*
- Event log*
- Auto keypad backlighting on entry
- · Keyswitch arming

- Programmable macro buttons and singlebutton arming
- A variety of wireless remote controls for single-button operation
- User Scheduling
- Automatically activates relays at programmed times
- Latchkey reports to pagers
- Auto arm/disarm
- "User access" time windows
- Supports up to four end user numeric pagers
- VIP Module allows system control from any touchtone phone
- · Chime by zone

Security Dealer Features

- Automatic System Load Shed
 - During extended AC power fail, the system battery will be disconnected to prevent irreversible battery failure. Reduces service calls to replace batteries
- Dynamic Signaling
 - Reduces redundant reporting to the central station when multiple reporting methods are used; i.e. digital dialer and AlarmNet radio
 - * Requires custom alpha keypad

VISTA-20P

Control Panel

Specifications:

Electrical:

- Aux. power 12VDC, 600mA maximum
- Seven hour standby at 400mA aux. load with four amp hour battery
- 16.5VAC/25VA transformer
- Alarm output 12VDC, 2.0 amps maximum
- For UL installations, combined aux. and alarm output cannot exceed 700mA

Output Control:

 Supports up to four relay boards (up to 16 relays)

Zones:

- Eight hardwired zones (15 with zone doubling)
- Selectable response 10msec, 350msec, 750msec
- Assignable to any partition
- 20 selectable zone types plus four configurable zone types
- Programmable swinger suppression

Expansion Devices:

- 4219 Eight hardwired zones 16mA
- 4204 Up to four relays 15mA standby (each active relay draws an additional 40mA)
- 4229 Eight hardwired zones and two relays - 36mA (each active relay draws an additional 40mA)

Accessories:

- 4286 VIP Voice Module 220mA
- 5881ENH RF Receiver support up to 40 zones 50mA
- 5883 Transceiver supports up to 40 zones
- Supports Eagle 1225 and 1221 boards

Keypads:

- 6160 Custom Alpha (required for programming) - 100mA
- 6150RF Fixed English RF LCD 85mA/40mA
- 6148 Fixed English LCD 70mA/30mA
- 6270 Graphic touchscreen user interface

Agency Listings:

UL Residential Fire, Burglary and CSFM

Smoke Detectors:

- Supports up to 16 two-wire smoke detectors
- Supports four-wire smoke detectors

Communications:

- · Touchtone or pulse
- · Formats supported
- ADEMCO Contact ID
- ADEMCO 4 + 2 Express
- ADEMCO low speed
- Sescoa/Radionics
- 3 + 1, 4 + 1 and 4 + 2 reporting
- Reporting capabilities
 - Split
 - Dual
- Split/Dual True dial tone detection
- Low battery reports 11.2 11.6VDC
- · AC loss and restoral reporting supported

Ordering:

VISTA-20PLCT Control Panel PCB only Control Panel VISTA-20P 6160 **English LCD Display** 6148 Fixed English LCD Display English LCD Display 6164 4204 Four-Relay Module 4219 Eight Zone Expander Eight Zone Expander 4229 4286 Voice Module

For more information:

 Australia
 Tel: (61) 1300 368 755
 Korea
 Tel: (82) 2-799 6130

 China
 Tel: (86) 755-8299 5168
 Singapore
 Tel: (65) 6333 9563

 Hong Kong
 Tel: (852) 2405 2323
 Taiwan
 Tel: (886) 2-2245 1000

 India
 Tel: (91) 11-5239 9900

www.security.honeywell.com security.ap@honeywell.com

Honeywell Security - Asia Pacific Honeywell International Inc. www.honeywell.com

